



SCHEMA DI MONTAGGIO - ASSEMBLY SCHEDULE

COD. 58.0436.00

REV. 00 DEL. 02/11/2009 TEC-LOG G.D.

Descrizione BMW E90 - E91 - E92

Fig. 1

- Togliere la copertura di plastica sotto la vettura;
 Remove the plastic covering under the car;
 Enlever la couverture en plastique au dessous de la voiture;
 Sacar la cobertura de plástico debajo del coche;
 Entfernen Sie die Plastikabdeckung unter dem Auto;



Fig. 2

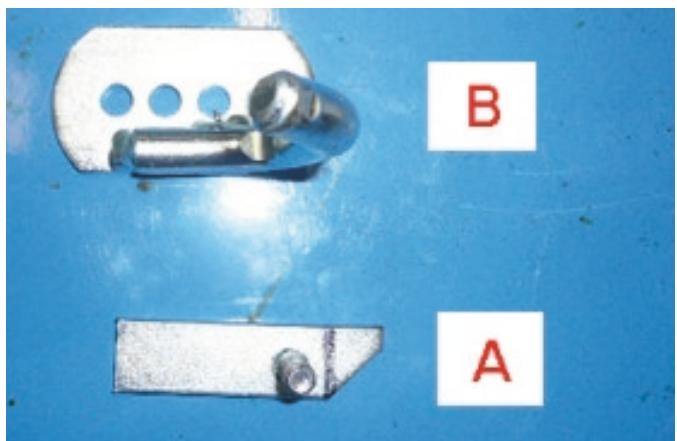


Fig. 3

- Inserire la staffa (A) e fissare la staffa (B);
 Insert the bracket (A) into the hole and fix the bracket (B);
 Insérer l'étrier (A) dans le trou et fixer l'étrier (B);
 Inserir el estribo (A) en el agujero y fijarlo (B);
 Fügen Sie die Schelle (A) in das Loch ein und fixieren Sie die Schelle (B);





RAGAZZON
TOP LINE
HIGH PERFORMANCE
STAINLESS STEEL EXHAUSTS

Fig. 4

Infine montare lo scarico previsto per il sottoparaurti del modello BMW 335i.

Finally install the rear silencer specific for the rear apron of the BMW model BMW 335i.

Enfin installer l'échappement prévu pour le pare-choc des modèles BMW 335i.



Fig. 5

En final, instalar el escape específico para el bajo-paragolpes de los modelos BMW 335i.

Schliesslich installieren Sie den Schalldämpfer spezifisch für die Heckschürze der Model BMW 335i.

Fig. 6

Fig. 7